

# BASIC INSTALLATION INSTRUCTIONS

## for an exact fit & better interior protection

**WARNING:** Proper trimming of mat is highly recommended, to ensure mat sits flat against the floor. This provides interior protection, and ensures mat does not interfere with brake and/or gas pedal. **DO NOT PLACE ANY FLOOR MAT OVER AN EXISTING FLOOR MAT.** Discontinue use if mat becomes damaged or in any way interferes with brake and/or gas pedal operation.

### CONTENTS


#### 2-Piece Set

- 1 Driver Side Mat
- 1 Passenger Side Mat



#### 4-Piece Set

- 2 Front Mats
- Rear Mat/Runner (can be twin pieces or full-across runner)
- 4 Connectors (for adjoining runner pieces)
- 4 Washers (for adjoining runner pieces)

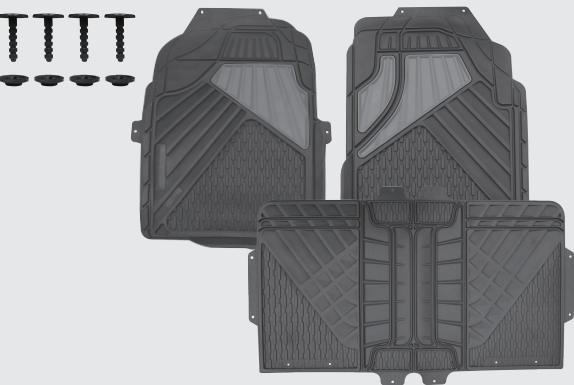

### FRONT MATS INSTALLATION (2 Piece & 4 Piece Sets)


- 1.** Identify driver side mat, marked with "D" at the top, and position on the driver's side floor. Place it in a location that best protects your vehicle carpet.

**Mat should lay completely flat against the vehicle floor without interfering with brake or gas pedal.**



(Figure A example only)


- 2.** If mat does not lay flat, use easy-trim guides to create an exact fit for your vehicle. For maximum protection, avoid removing too much material at a time. (See Figure A) Continue to trim until you achieve the best fit for your vehicle.

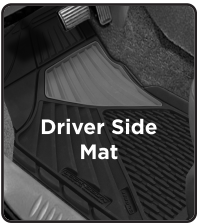

- 3.** Repeat for passenger side mat, marked with a "P" at the top (See Figure B)



(Figure B example only)

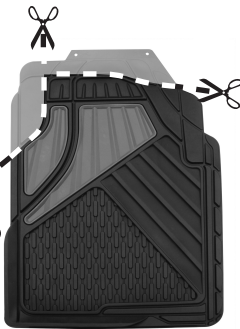

## REAR MAT(S) INSTALLATION (4 Piece Sets Only)

**IMPORTANT:** Please follow instructions carefully for installation of rear mat(s). Once you begin trimming for a full-across runner you cannot create twin mats, and vice versa.

- 1.** Determine whether the rear floor in your vehicle will accommodate a full-across runner or twin rear mats.


If the floor is flat, you have the option to trim for a full-across runner (See 2A), or to trim for twin rear mats (See 2B).

If the floor is **not** flat, we recommend trimming for twin rear mats (See 2B).


### FULL-ACROSS RUNNER

**WARNING:** Do not proceed with the following cuts unless you are certain a full-across runner will work.

- 2A.** Trim mat in four locations to create three separate pieces. (See Figure C)

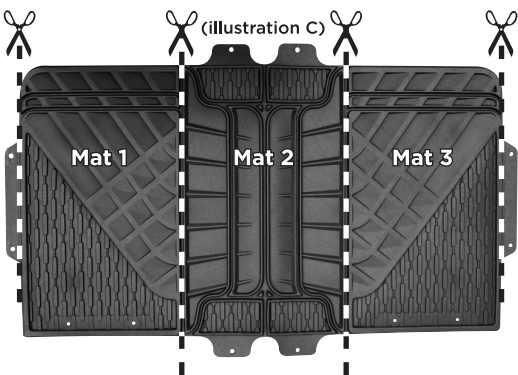

- 3A.** Position Mat 2 under Mat 1 and 3 and use four provided connectors and washers for a tight fit. (See Figure D)

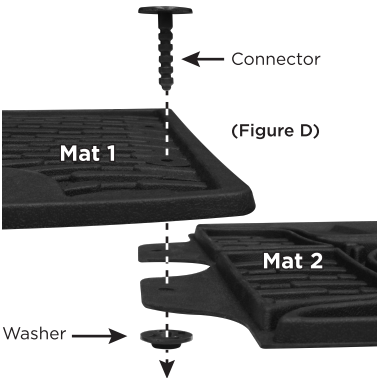


- 4A.** Finished mat should look like (Figure E). Place in vehicle and trim away any excess material if necessary.



### TWIN REAR MATS

**WARNING:** Do not proceed with the following cuts unless you are certain you want two separate twin rear mats.

- 2B.** Cut mat symmetrically to create two separate mats as indicated in (Figure F).

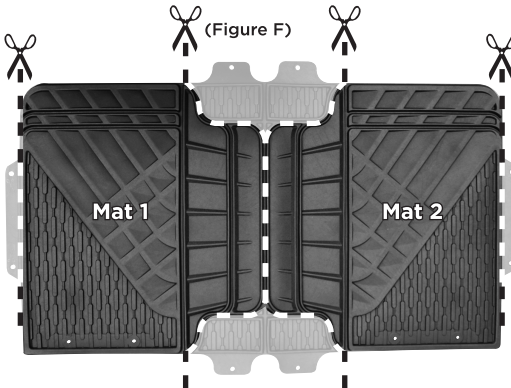

- 3B.** Place in vehicle, and trim to a smaller mat if necessary (See Figure G)

